



LIST OF PARTS

1	Frame	37	Magazine Base
2	Slide Stop	38	Magazine Base Lock
3	Slide Stop Spring	39	Magazine Spring
4	Slide Stop Spring Pin	40	Follower
5	Trigger	41	Recoil Spring
6	Trigger Pin (2x)	42	Recoil Spring Guide Rod
7	Trigger Bar	43	Barrel
8	Trigger Spring	44	Slide
9	Pin (2x)	45	Front Sight
10	Ejector	46	Front Sight Pin
11	Sear	47	-
12	Sear Spring	48	-
13	Sear Spring Pin (2x)	49	-
14	-	50	Extractor
15	-	51	Extractor Pin
16	Hammer	52	Extractor Spring
17	-	53	Rear Sight
18	Hammer Pin	54	Firing Pin
19	Hammer Pin Retaining Peg	55	Firing Pin Spring
20	Main Spring Strut	56	Firing Pin Stop
21	Main Spring	57	-
22	Main Spring Plug	58	-
23	-	59	-
24	Magazine Funnel	60	-
25	-	61	-
26	Grip Panel - Left	62	-
27	Grip Panel - Right	63	-
28	Grip Panel Screw (2x)	64	Barrel Bushing
29	a) Safety - Left	65	Trigger Adjustment Screw (2x)
	b) Safety - Right	66	-
30	a) Safety Detent Plunger - Left	67	-
	b) Safety Detent Plunger - Right	68	-
31	Safety Detent Plunger Spring	69	Buffer *
32	Magazine Catch	70	Funnel
33	Magazine Catch Spring	71	Main Spring Plug Pin
34	-	72	Sleeve **
35	Magazine Catch Spring Screw	73	Securing Screw
36	Magazine Body	74	Ejector Spring (2x)

Comments:

The numbers marked with dash (-) are stated here for the purpose of conformity with the lists of other pistol parts only. The part marked * is only for pistols in .40 S&W caliber. The part marked ** is only for pistols in 9x19 caliber.