



LIST OF PARTS

- | | | | |
|----|-------------------------------------|----|--|
| 1 | Frame * | 35 | Magazine Catch Spring Screw |
| 2 | Slide Stop * | 36 | Magazine Body * |
| 3 | Slide Stop Spring | 37 | Magazine Base |
| 4 | Slide Stop Spring Pin | 38 | Magazine Base Lock |
| 5 | Trigger * | 39 | Magazine Spring * |
| 6 | Trigger Pin | 40 | Follower * |
| 7 | Trigger Bar * | 41 | Recoil Spring * |
| 8 | Trigger Spring | 42 | Recoil Spring Guide * |
| 9 | Pin (3x) | 43 | Barrel * |
| 10 | Ejector * | 44 | Slide * |
| 11 | Sear * | 45 | Front Sight |
| 12 | Sear Spring | 46 | Front Sight Pin |
| 13 | Sear Pin * | 47 | Loaded Chamber Indicator * |
| 14 | Firing Pin Block Lever * | 48 | Loaded Chamber Indicator Spring * |
| 15 | Firing Pin Block Lever Spring * | 49 | Loaded Chamber Indicator Nut * |
| 16 | Hammer * | 50 | Extractor * |
| 17 | Disconnecter * | 51 | Extractor Pin |
| 18 | Hammer Pin | 52 | Extractor Spring |
| 19 | Hammer Pin Retaining Peg | 53 | Rear Sight |
| 20 | Main Spring Strut | 54 | Firing Pin * |
| 21 | Main Spring | 55 | Firing Pin Spring |
| 22 | Main Spring Plug * | 56 | Firing Pin Stop * |
| 23 | Main Spring Plug Pin | 57 | Firing Pin Coiled Pin * |
| 24 | Magazine Guide | 58 | Firing Pin Block Stop * |
| 25 | Magazine Guide Pin | 59 | Firing Pin Block Stop Spring * |
| 26 | Grip Panel - Left * | 60 | Hammer Decocking Lever Controller * |
| 27 | Grip Panel - Right * | 61 | Decocking Lever * |
| 28 | Grip Panel Screw (2x) * | 62 | Decocking Lever Spring * |
| 29 | Safety - Left * | 63 | Safety - Right * |
| 30 | Safety Detent Plunger - Left * | 64 | Safety Detent Plunger - Right * |
| 31 | Safety Detent Plunger Spring (2x) * | 65 | Slide Stop - Right * |
| 32 | Magazine Catch * | 66 | Trigger Overtravel Adjusting Screw * |
| 33 | Magazine Catch Spring | | |
| 34 | Trigger Bar Spring | | |

Comments:

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.