



1 Frame *	24 Magazine Guide	46 Front Sight Pin
2 Slide Stop	25 Magazine Guide Pin	47 Loaded Chamber Indicator *
3 Slide Stop Spring	26 Grip Panel -Left *	48 Loaded Chamber Indicator Spring *
4 Slide Stop Spring Pin	27 Grip Panel -Right *	49 Loaded Chamber Indicator Nut *
5 Trigger	28 Grip Panel Screw (2x)	50 Extractor *
6 Trigger Pin	29 Safety -Left *	51 Extractor Pin
7 Trigger Bar	30 Safety Detent Plunger -Left	52 Extractor Spring
8 Trigger Spring	31 Safety Detent Plunger Spring (2x)	53 Rear Sight
9 Pin (3x)	32 Magazine Catch	54 Firing Pin *
10 Ejector	33 Magazine Catch Spring	55 Firing Pin Spring
11 Sear	34 Trigger Bar Spring	56 Firing Pin Stop *
12 Sear Spring	35 Magazine Catch Spring Screw	57 Securing screw (2x)
13 Sear Pin	36 Magazine Body *	58 Safety -Right
14	37 Magazine Base	59 Safety Detent Plunger -Right
15	38 Magazine Base Lock	60 Shaped Washer (2x)
16 Hammer	39 Magazine Spring *	
17 Disconnecter	40 Follower	
18 Hammer Pin	41 Recoil Spring *	
19 Hammer Pin Retaining Peg	42 Recoil Spring Guide *	
20 Main Spring Strut	43 Barrel *	
21 Main Spring	44 Slide *	
22 Main Spring Plug	45 Front Sight	
23 Main Spring Plug Pin		

The parts marked * differ according to versions, or as case may be in some versions are entirely missing.