



## LIST OF PARTS

1	Frame *	34	Trigger Bar Spring
2	Slide Stop	35	Magazine Catch Spring Screw
3	Slide Stop Spring	36	Magazine Body
4	Slide Stop Spring Pin	37	Magazine Base
5	Trigger	38	Magazine Base Lock
6	Trigger Pin	39	Magazine Spring
7	Trigger Bar	40	Follower
8	Trigger Spring	41	Recoil Spring
9	Pin (3x)	42	Recoil Spring Guide
10	Ejector *	43	Barrel
11	Sear *	44	Slide with Barrel Bushing
12	Sear Spring	45	Front Sight
13	Sear Pin	46	Front Sight Pin
14	Firing Pin Block Lever	47	Loaded Chamber Indicator
15	Firing Pin Block Lever Spring	48	Loaded Chamber Indicator Spring
16	Hammer *	49	Barrel Stop
17	Disconnecter *	50	Extractor
18	Hammer Pin	51	Extractor Pin
19	Hammer Pin Retaining Peg	52	Extractor Spring
20	Main Spring Strut	53	Rear Sight
21	Main Spring	54	Firing Pin
22	Main Spring Plug	55	Firing Pin Spring
23	Main Spring Plug Pin	56	-
24	Magazine Guide	57	Firing Pin Coiled Pin
25	Magazine Guide Pin	58	Firing Pin Block Stop
26	Grip Panel - Left *	59	Firing Pin Block Stop Spring
27	Grip Panel - Right *	60	Hammer Decocking Lever Controller *
28	Grip Panel Screw (2x)	61	Decocking Lever *
29	Safety *	62	Decocking Lever Spring *
30	Safety Detent Plunger *	63	Recoil Spring Housing
31	Safety Detent Plunger Spring *	64	Barrel Bushing
32	Magazine Catch	65	Barrel Stop Screw
33	Magazine Catch Spring		

### Comments:

The parts marked \* differ according to versions, or as case may be in some versions are entirely missing.